

| Shell Base Unit | Extension 1 | D | a _p | L | Z _{eff} | Z | Shell Locking Screw |
|-----------------------------------|---------------------------|----|----------------|-----|------------------|----|---------------------|
| T490 LNK-D63-082-4-BT50-FT | T490 CAP-D63-24-4-20-13FT | 63 | 82 | 107 | 4 | 28 | SR M12x30 DIN912 |
| | T490 CAP-D63-36-4-20-13FT | | 106 | 131 | | 36 | |
| | | | 118 | 143 | | 40 | |
| T490 LNK-D80-105-4-BT50-FT | T490 CAP-D80-24-4-25-13FT | 80 | 105 | 135 | 4 | 36 | SR M16x40 DIN912 |
| | T490 CAP-D80-36-4-25-13FT | | 129 | 159 | | 44 | |
| | | | 141 | 171 | | 48 | |

