
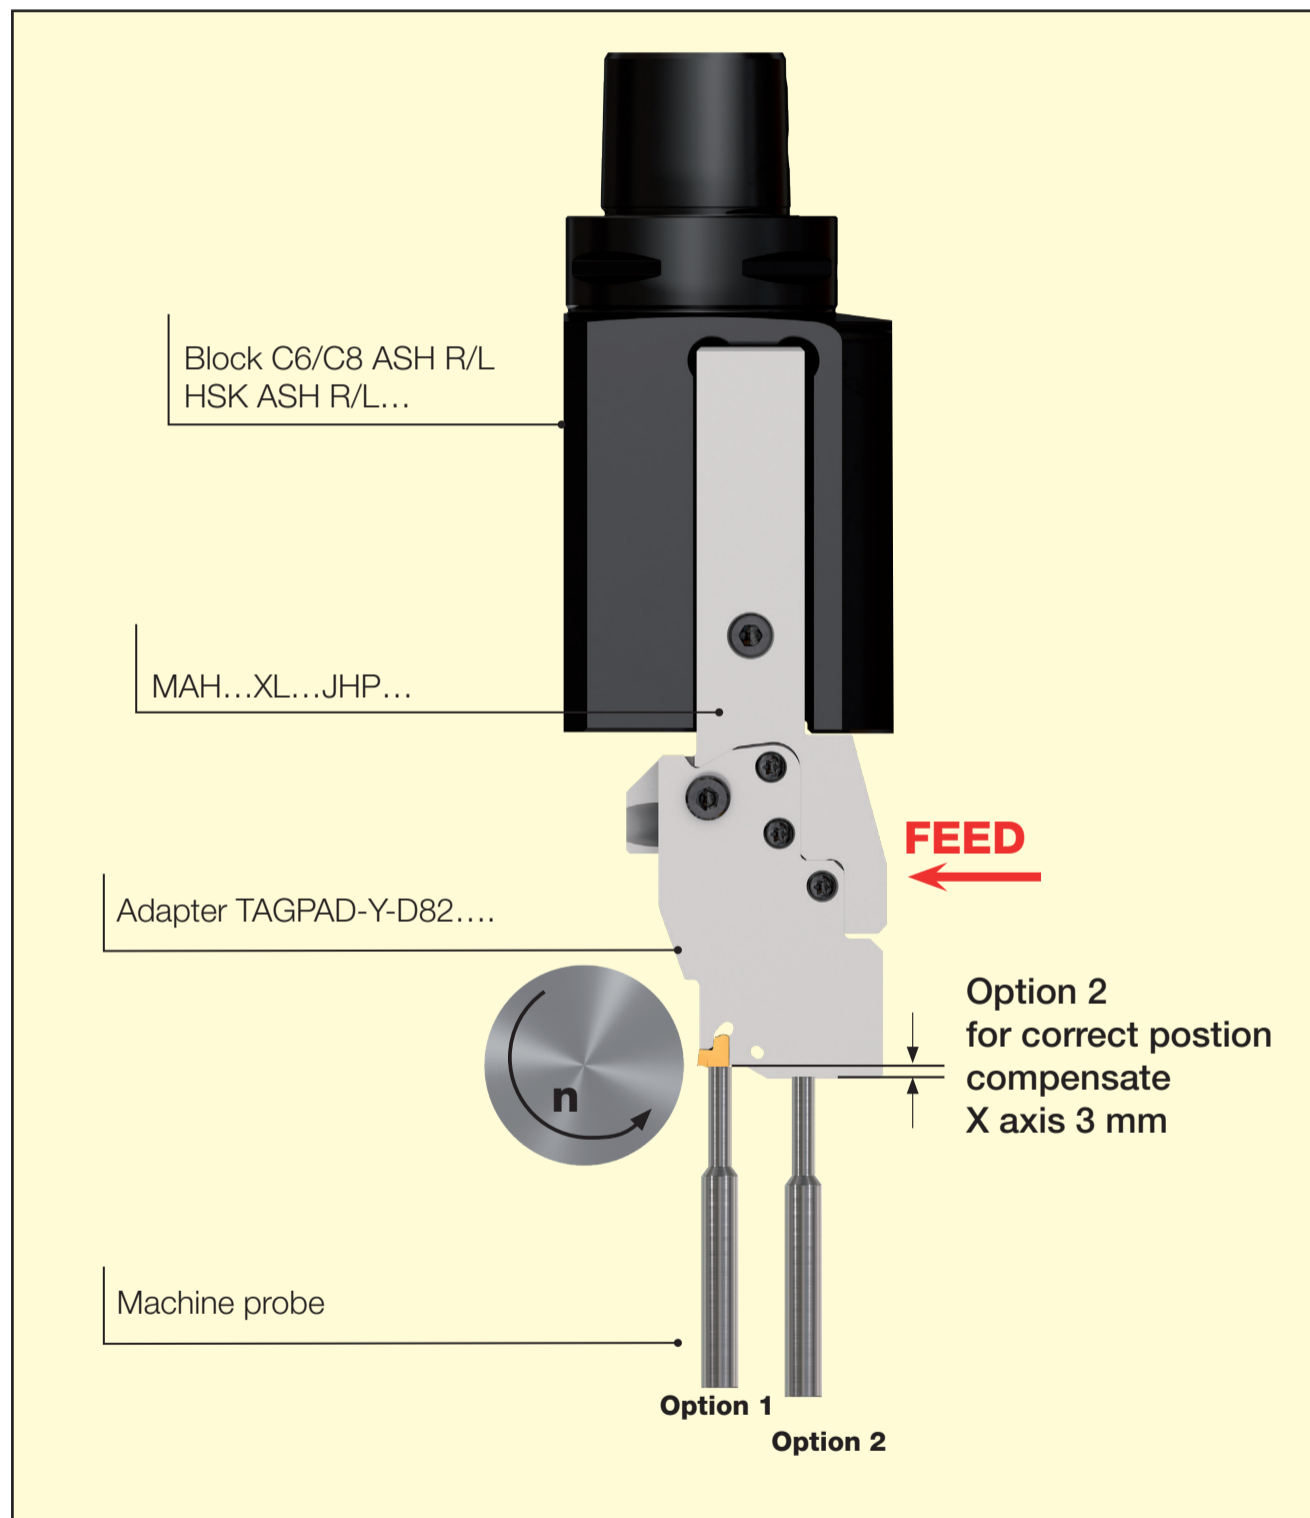


Y Axis TAGPAD setup on Multi-Task and Turning Center Machines

For setup in X direction, use the dimensions marked on the adapter. Setup in Y Axis is not needed.

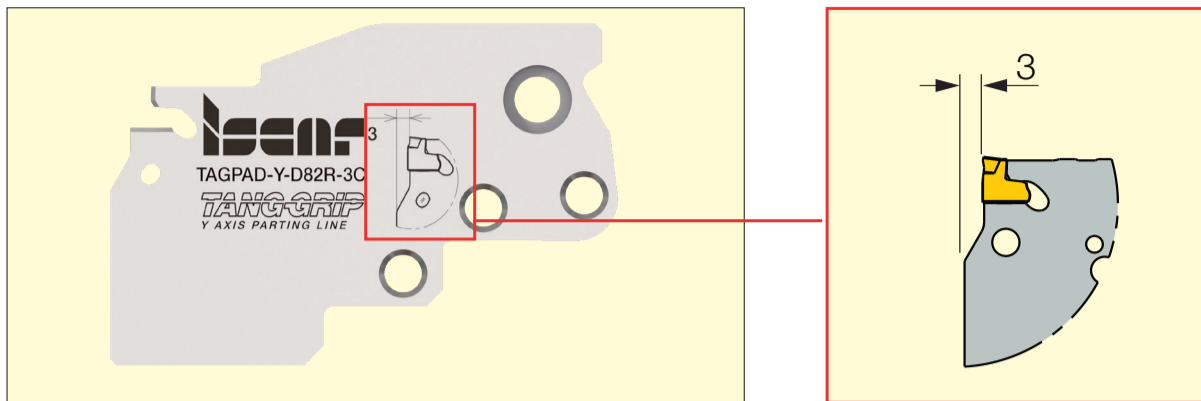

* Option 1 is preferable due to better accuracy

Setting in X Axis

Set the cutting edge on the center line:

Option 1 - Gauge the cutting edge

Option 2 - Gauge the blade and compensate 3mm

**Click Link to
See Short Videos**

<https://youtu.be/lfc1JqMC4FE>
<https://youtu.be/HtU2zHmcD1I>
<https://youtu.be/ZCFYnxB4hLw>